 


## For Cable TV


1. Use your DVD remote.
2. Select VCR.
3. Select SETUP/MENU.
4. Select TUNING as shown below.



- Scroll down to TUNING.
  - Once you highlight select enter (OK button).
5. Select TUNING BAND.

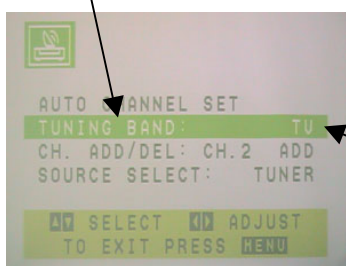

- If it shows CATV you're fine, however if it shows TV as shown above you need to change the setting to CATV.
- To change to CATV, use the right arrow. You will see the TUNING BAND change to CATV as shown below.

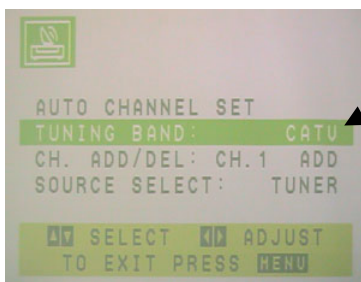

6. Select SETUP/MENU to exit and return to cable.

Note: You should pick up channels 3,4 but not 5 or 6, and channels 7 thru 67, and channel 70.